Pressure Swing Dryers

Pressure Swing dryers provide a source of very dry compressed air for use as a zero gas in humidity calibration systems, or for general laboratory applications.

PSD2 & PSD4 Pressure Swing Dryers





The Michell PSD Series Pressure Swing Dryers use two columns filled with 4Å molecular sieve desiccant, which are used alternately on a two-minute switching cycle. The PSD dryers are designed to operate continuously, using a small proportion of the dried air, to regenerate the offline column - generally giving desiccant life in excess of five years. This type of heatless regeneration also uses significantly less energy than a 'heated' type of dryer.

The PSD2 is fitted with inlet and outlet pressure regulation, and delivers up to 7 Nl/min (14.8 scfh) of dry air at $1ppm_v$ or better (-75°Cdp (-103°Fdp)).

The PSD4 is supplied with stainless steel internals and larger volume desiccant columns. These factors, combined with a larger pressure drop between inlet and outlet, deliver up to 10 Nl/min (21.2 scfh) at 13 ppb_v or better (-100°Cdp (-148°Fdp)).

Highlights

- Excellent long term stability
- Maintenance free except for a desiccant change once every 5 years
- Completely self-contained
- Low power consumption

Issue No: PSD2 and PSD4_97160_V2_UK_0613

Please note: Michell Instruments adopts a continuous development program which sometimes necessitates specification changes without notice. Please contact us for latest version.




Technical Specifications


Model	PSD2	PSD4
Gas output Flow Pressure Moisture content	7 NI/min (14.8 scfh) 0.68 barg (10 psig) <1ppm _v (<-75°Cdp (<-103°Fdp))	30 NI/min (63.6 scfh) Atmospheric <13ppb _v (<-100°Cdp (<-148°Fdp))
Required gas supply Flow Pressure	10 NI/min (21.2 scfh) 5 to 7 barg (70 to 100 psig)	20 NI/min (42.2 scfh) 6 to 7 barg (80 to 100 psig) and ≤-40°Cdp (≤-40°Fdp)
Moisture content:	(Oil and liquid water-free)	(Oil and liquid water-free)
Suitable for use with	DG2, DG4, HG10	VDS3
Туре	Twin column desiccant, pressure swing	Twin column desiccant, pressure swing
Desiccant	4 Ångström Molecular sieve bead (4-8 mesh)	4 Ångström Molecular sieve bead (4-8 mesh)
Timer	Motorized cam	Motorized cam
Gas connections	Inlet - Swagelok® AISI ¼" tube bulkhead Outlet - Swagelok® AISI ¼" tube bulkhead	Inlet - Swagelok® stainless steel ¼" tube bulkhead Outlet - Swagelok® stainless steel ¼" tube bulkhead
Filters	None	Outlet – Millipore Wafergard IIF Micro Inline (sealed type) with Teflon PTFE membrane element rated at >99.999% retention of 0.003 micron particles Vent – Headline nylon housing with epoxy ester bonded borosilicate glass microfiber element rated at 99.999% removal of 0.1 micron particles
Power	100 to 115 or 220 to 240 V AC, 50/60Hz	100 to 115 or 220 to 240 V AC, 50/60Hz
Cable entry	IEC (3 pin female c13) input socket	Plastic cable gland - suitable for ø4-8mm cable
Operating temperature	+5 to +35°C (+41 to +95°F)	+10 to +40°C (+50 to +104°F)
Storage temperature	-40 to +35°C (-40 to +95°F)	-40 to +50°C (-40 to +122°F
Construction	Rack mount, 19" x 6U x 324mm (12.8")	GRP wall mounting enclosure 735 x 535 x 270mm (29 x 21 x 10.5")
Weight	12.5kg (27.5lbs)	25kg (55lbs)

Pressure Swing Dryers

Dimensions - PSD2

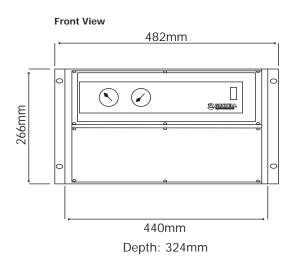

Dimensions - PSD4

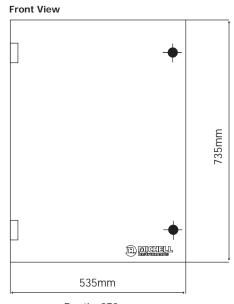

Depth: 270mm

